



Visualizer 21inch actiMirror QUICK MANUAL

NEW SKIN DEVICE

Spring 2021

INCLUDED ITEMS

Delivery



Cardboard (Large)

× 1



Cardboard (Small)

× 1



Cardboard (Large)

1. Smart Mirror
2. Screws for Top housing
3. USB Cover
 - ✓ Cover for mirror side installed to the mirror
 - ✓ Cover for outer side
4. Power Cover
 - ✓ Cover for mirror side installed to the mirror
 - ✓ Cover for outer side
5. AC adapter
 - ✓ AC adapter with specified plug type
6. Manual
7. Screen Cleaning Cloth
8. Tools
 - ✓ Phillips screwdriver
 - ✓ Hex wrench



Cardboard (Small)

1. Top Housing
 - ✓ Top Housing installed
 - ✓ Top Housing angle fixed
 - ✓ 2 USB cable inside Top Housing connected
2. FLIR camera box
 - ✓ Camera installed inside Top Housing

INSTALLATION GUIDE

Please follow the steps for installation

Please scan the QR code with your smartphone
to access the video for installation



- 1 Legs Installation
- 2 Top Housing Installation
- 3 Power connection, LAN connection,
USB connection
- 4 USB cover and Power cover
Installation
- 5 LAN / Wi-Fi Setting
- 6 Time Zone Setting


1

Installation Guide

LEGS INSTALLATION

1

Install Legs with supplied screws

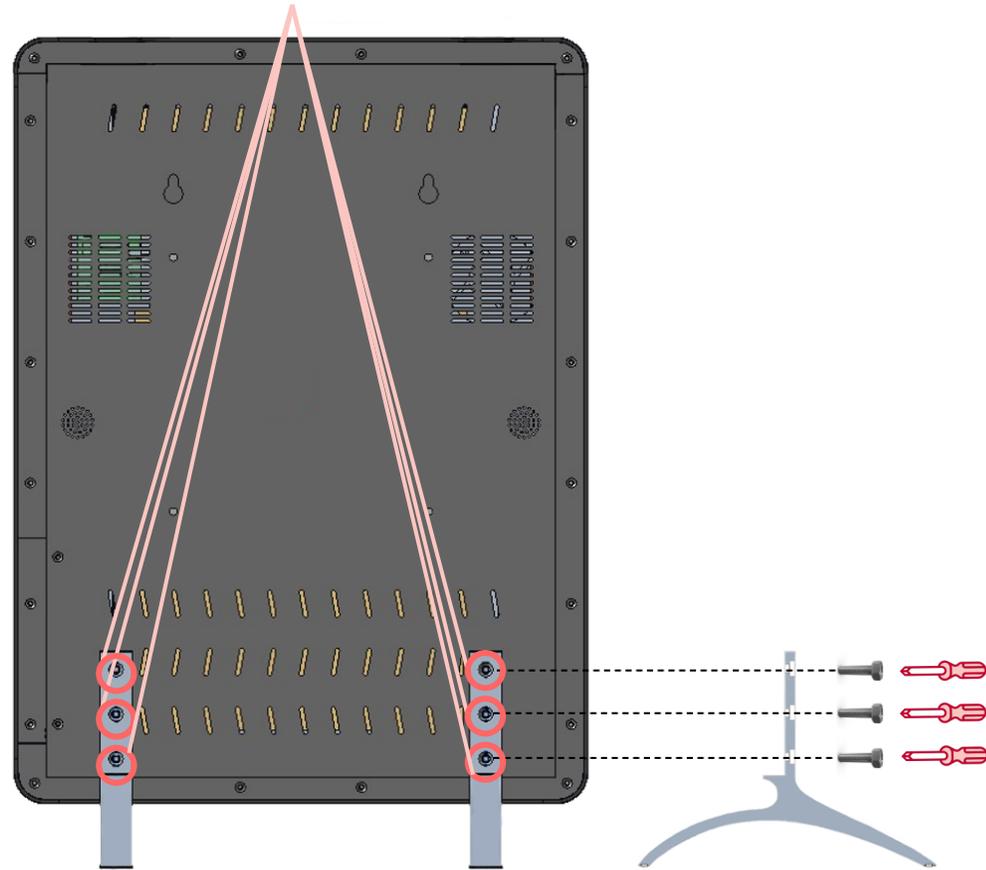

2

Installation Guide


TOP HOUSING INSTALLATION

1 Remove the two screws from the mirror


! Removed screws are not needed

2 Install Top housing with supplied screws

! Use screw holes according to the mirror size

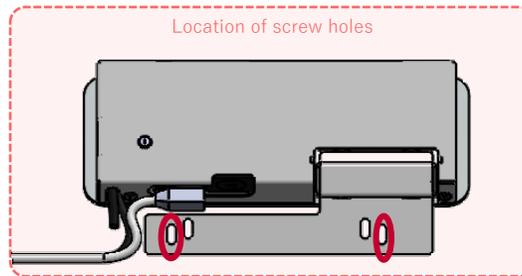



3 Plug the cable inside the USB cover.

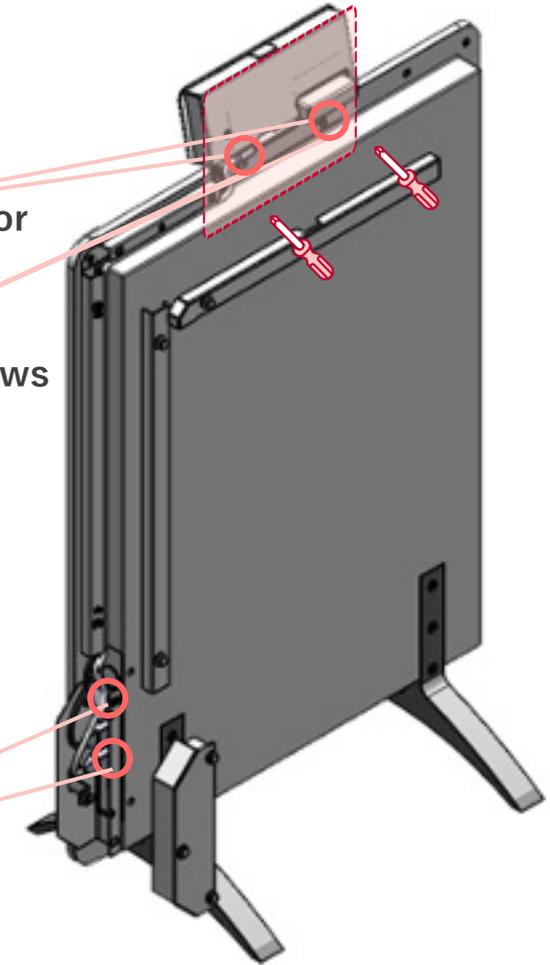

3

Installation Guide

POWER, LAN, USB CONNECTION

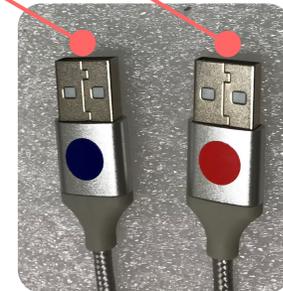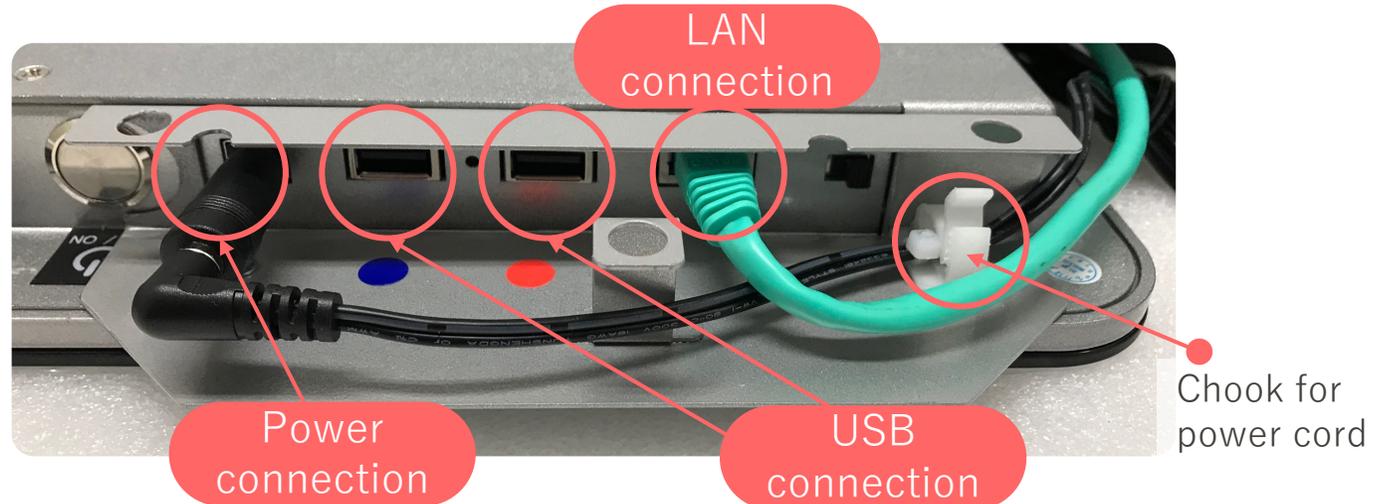

Please make sure each USB is connected to the correct location. Use the sticker color as indication (blue-blue and red-red)



4

Installation Guide

USB COVER AND POWER COVER INSTALLATION

1 Place the USB Cover and push the plunger in.

2 Place the Power Cover and push the plunger in.

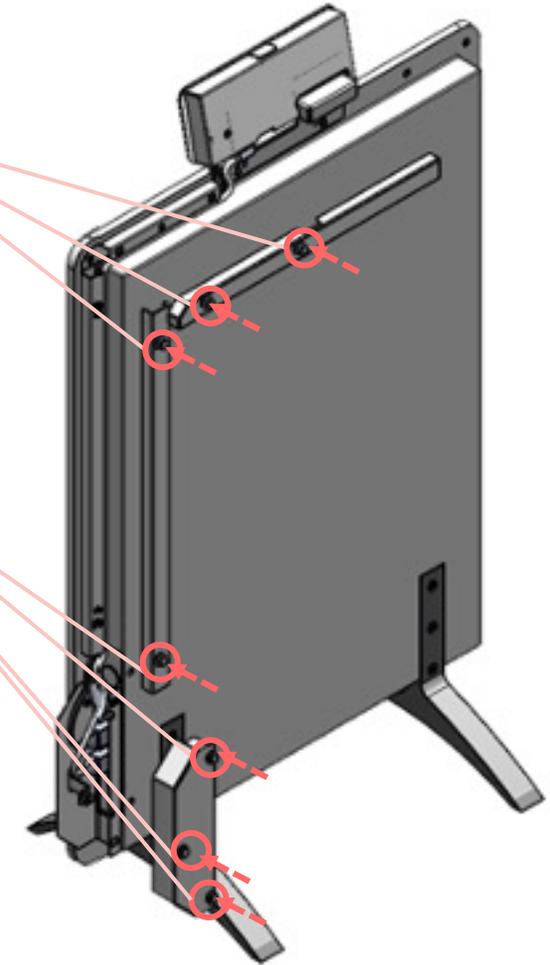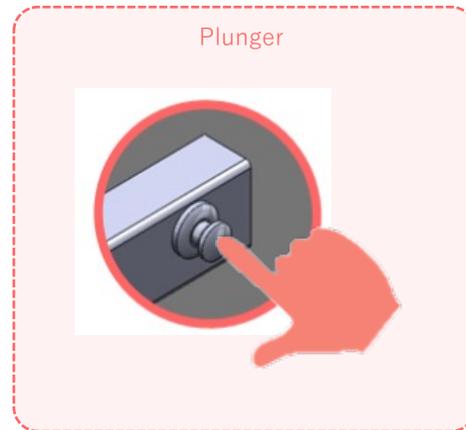


LAN/WI-FI SETTING

Settings for connecting to the internet.


⚠ Without internet connection, the skin diagnostic service will not be available

A Status Check



Connected :
Internet connection available

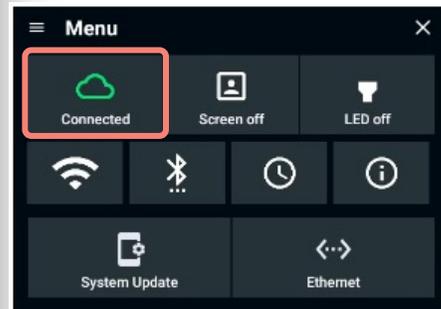



Offline :
Internet connection NOT available

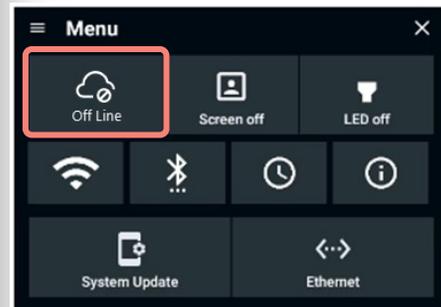

B Wi-Fi Setting

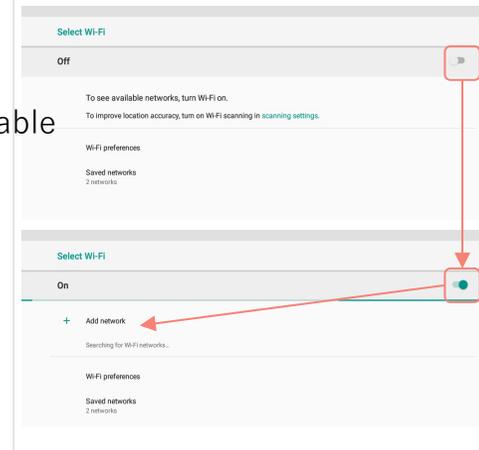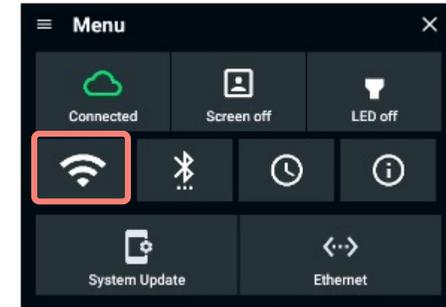

C LAN Setting

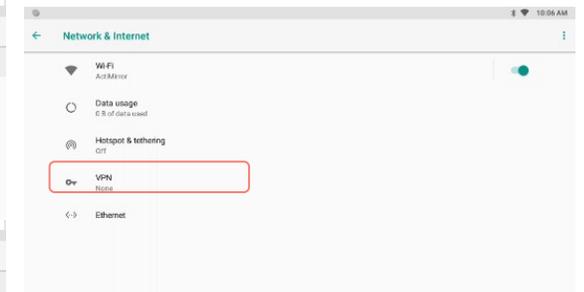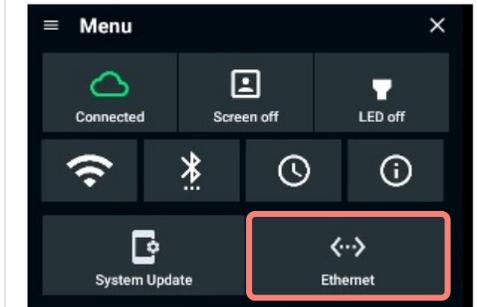




⚠ Please turn OFF Wi-Fi if using LAN connection

*Please contact with your system administrator if you have any troubles for Wi-Fi and LAN setting.


6

Installation Guide

TIME ZONE SETTING

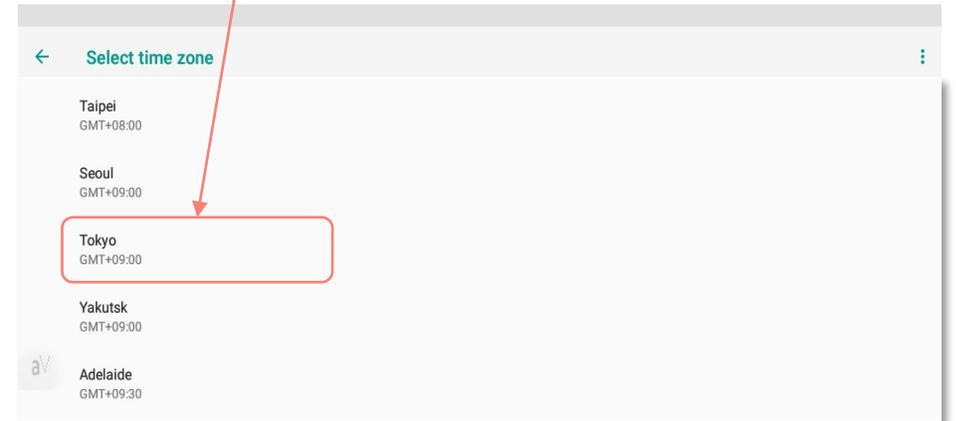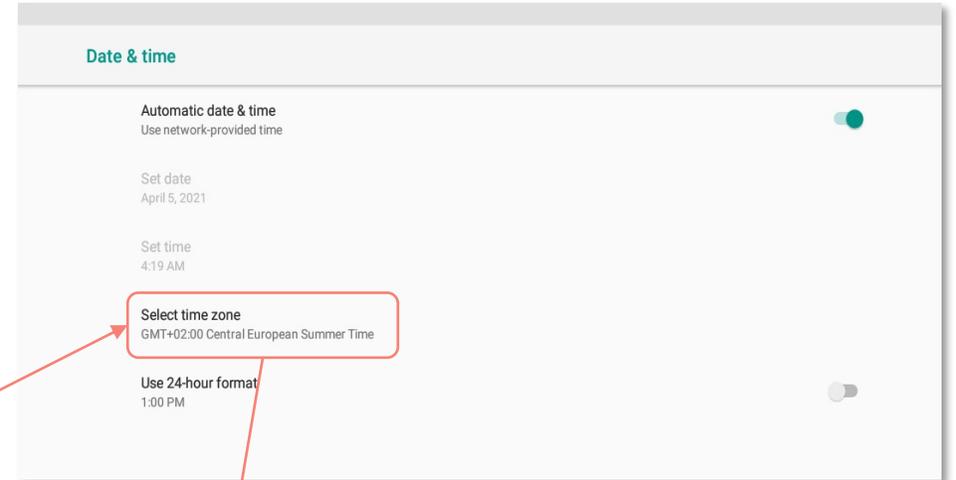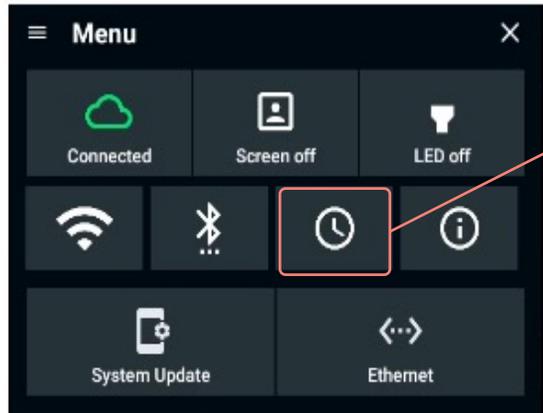


APPLICATION FLOW

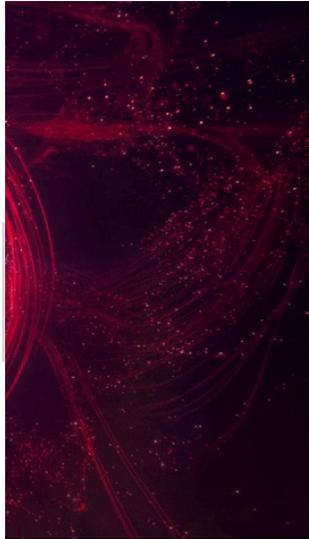


Application will start upon pressing power ON button of the mirror.




- Language Selection.
- Press 'Get Started' to start skin diagnostic

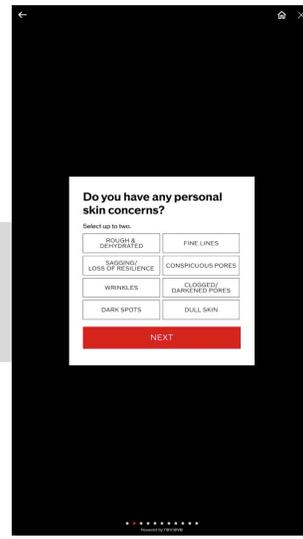

- Select up to two current personal skin concerns.
- Rough & dehydrated, Fine lines, Sagging/Loss of resilience, Conspicuous pores, Wrinkles, Clogged/Darkened pores, Dark spots, Dull skin

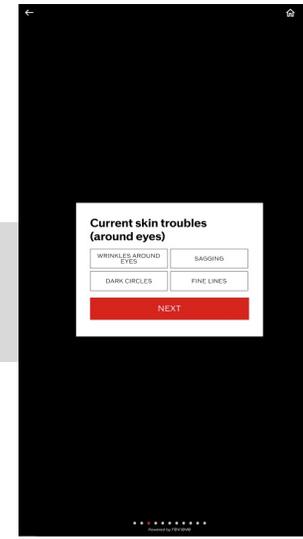

- Select up to one current personal skin concerns around eyes.
- Wrinkles around eyes, Sagging, Dark circles, Fine lines

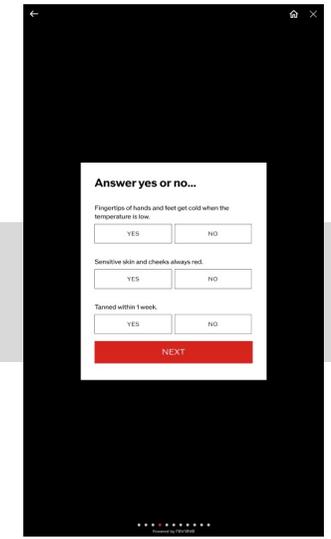

- Blood Circulation Questions
- -Fingertips of hands and feet get cold when the temperature is low
- -Skin feels irritated easily and cheeks are always red
- -Tanned within 1 week

APPLICATION FLOW

I am a

WOMAN	MAN
NON-BINARY	PREFER NOT TO SAY

NEXT

Gender Selection

Let us know your age

LESS THAN 29	30-34
35-44	MORE THAN 45

NEXT

Age Selection

Tokyo, Tokyo, Japon

Tokyo Tower, 4 Chome-2-8 Shibakoen, Minato, ...

Tokyo, Japon

Tokyo Restaurant, Al Urubah Road, Rad Arabi...

Tokyo Central, Harbor Boulevard, Costa Mesa...

Tokyo powered by Google

UV index: 10 Humidity: 70% Pollution: 40

NEXT

Location Selection

We are going to take a selfie to analyze your skin.


Remove your glasses Pull back hair

Face directly at camera Keep neutral expression

GO TO SELFIE

Selfie Guidance


APPLICATION FLOW

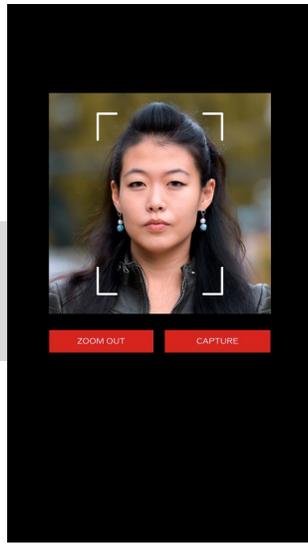


Press 'CAPTURE' to take a selfie for skin analysis




Countdown

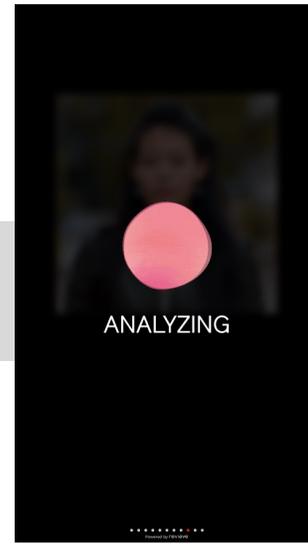

Analyzing

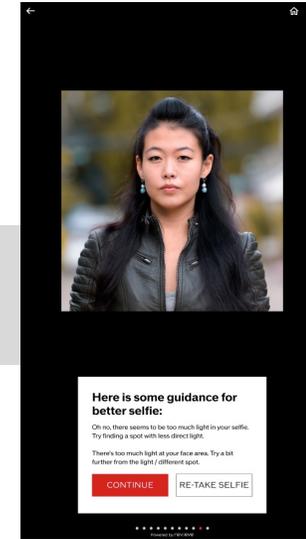


Selfie Confirmation

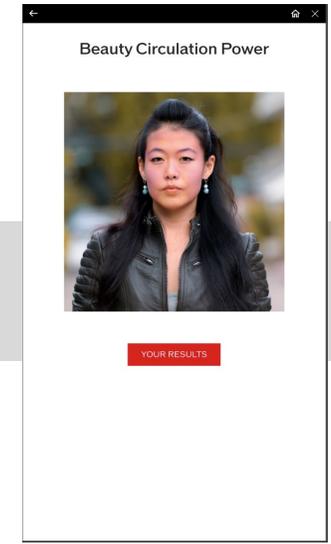

Beauty Circulation Image

APPLICATION FLOW

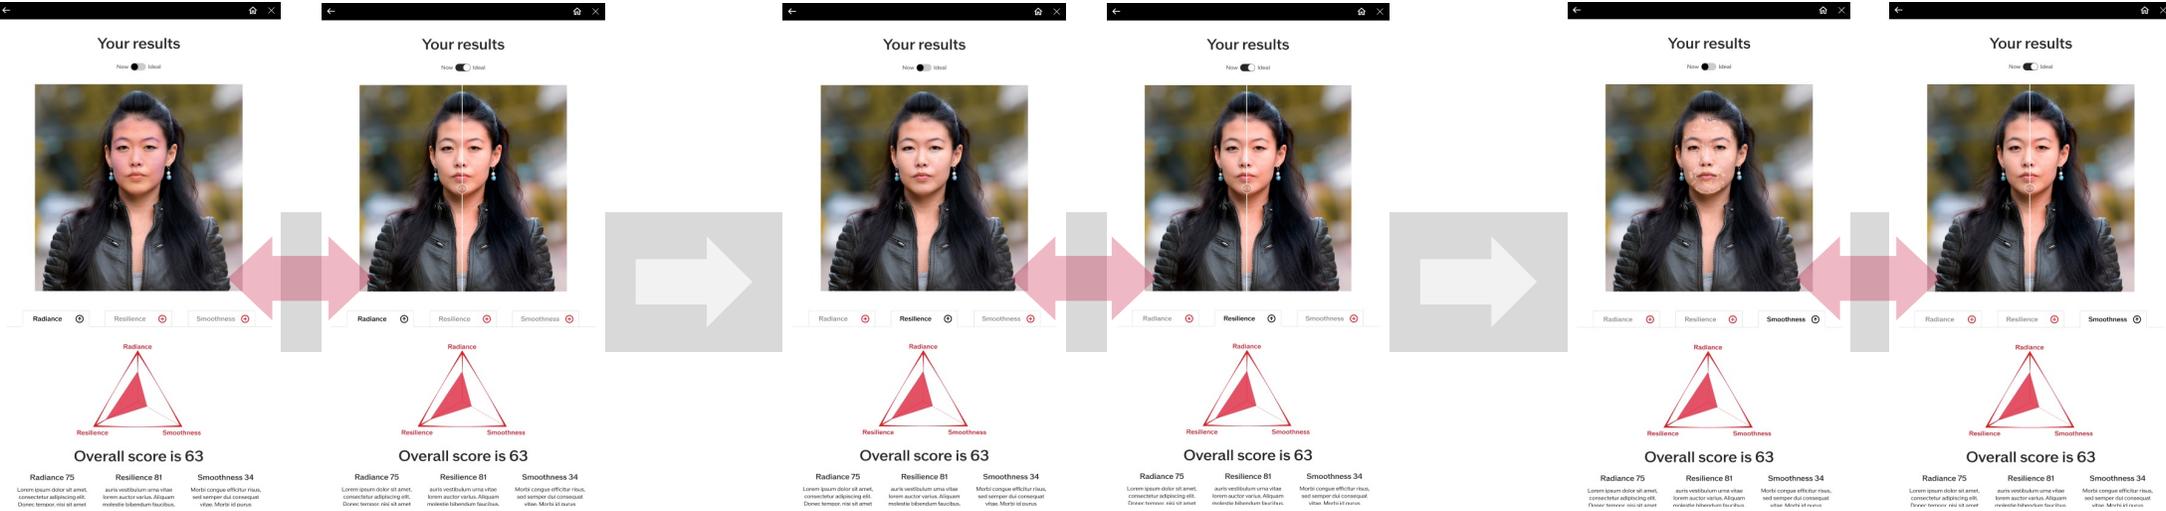

Radiance Results



When the temperature is uniform
⇒ Good Beauty Circulation Power



When the temperature is NOT uniform
⇒ Poor Beauty Circulation Power

Resilience Results

Results and Color:

- Excellent(0-0.4)** White
- Good(0.4-0.7)** Blue
- Ok(0.7-1.0)** Red

Smoothness Results

Results and Color:

- Excellent(0-0.4)** blank/no color
- Good(0.4-0.7)** White
- Ok(0.7-1.0)** Orange

APPLICATION FLOW

Radiance + Resilience + Smoothness +

Overall score is 63

Metric	Score	Description
Radiance	75	Lorem ipsum dolor sit amet, consectetur adipiscing elit. Donec tempor, nisi sit amet luctus dignissim, orci ipsum tempor metus, nec
Resilience	81	auris vestibulum urna vitae lorem auctor varius. Aliquam molestie bibendum faucibus. Nunc ultrices at quam quis posuere. Ut vel turpis a nisi bibendum ornare.
Smoothness	34	Morbi congue efficitur risus, sed semper dui consequat vitae. Morbi id purus scelerisque, faucibus justo sit amet, elementum nisi. Quis

Recommended for you

Defend

179
REGALIA

Power Infusing Concentrate

Regenerate

Brightening Gel Cream Wrinkle Smoothing Cream

Speciality Item

LiftDefine Radiance Serum Treatment Softener Enriched

Eye Care

Anti-Dark Circles Eye Cream

SAVE TO YOUR ACCOUNT


Recommended Products to be displayed

1. UTM (for everyone)
2. 2 Moisturizer
(according to Ultimate triangle score)
3. Specialty item:
2 items for Face
(according to skin concerns.)
4. 1 item for Eye
(according to eye skin concerns.)




APPLICATION FLOW

1 Scan QR code with your smartphone.

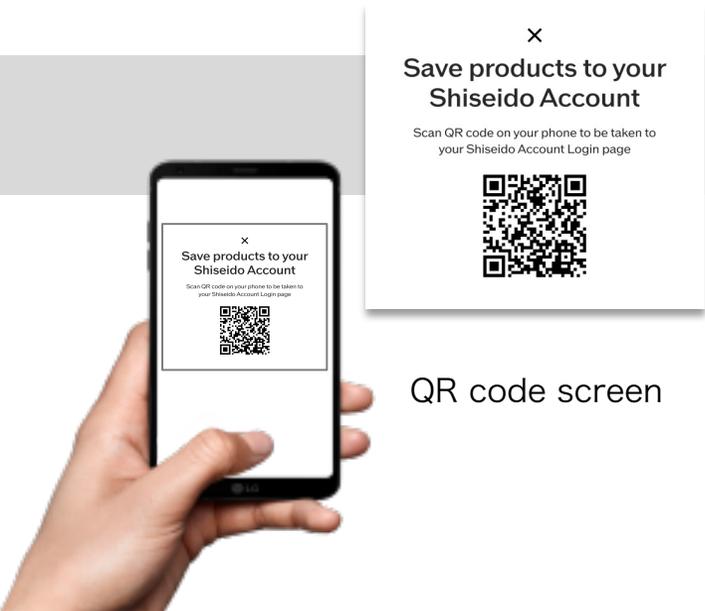

QR code screen


2 Forward the result to your smartphone

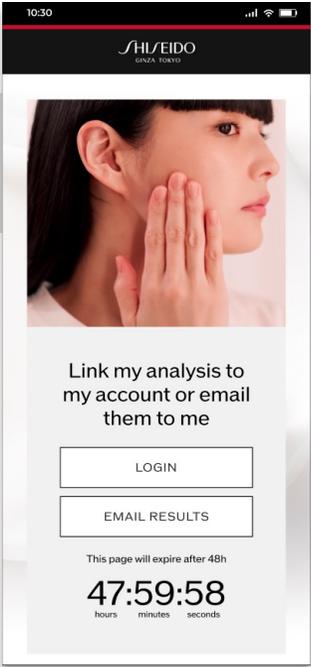

A Already have an account of Shiseido



B Forward only result without an account

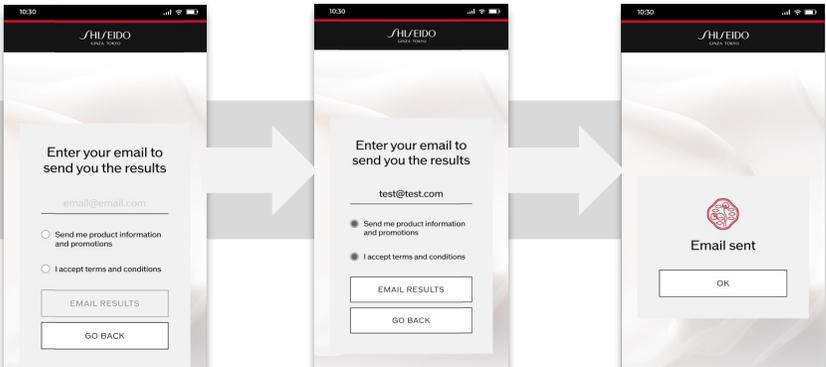

FAQ

1. The mirror does not turn ON after pressing the power ON button.
 - Please confirm the power supply is plugged into the outlet.
 - Please confirm the power cable is connected to the AC adapter.
 - Please confirm the AC cable is connected to the the mirror.
 - If you are still having trouble, please contact maintenance support.
2. There is no response when touching/pressing the screen.
 - Please clean the screen with the attached screen cleaning cloth.
 - If you are still having trouble, please contact maintenance support.
3. Cannot connect to the internet.
 - Please confirm the LAN cable is connected to the HUB.
 - Please confirm the LAN connection of the mirror.
 - If you are still having trouble, please contact maintenance support.
4. Camera NOT working.
 - Please confirm the mirror switch at the bottom of the side of the mirror is ON (down).
 - If you are still having trouble, please contact maintenance support.
5. There is camera error during skin analysis.
 - Please confirm the USB cable is connected to the mirror.
 - Please confirm the USB cables are connected to the correct location.
 - If you are still having trouble, please contact maintenance support.
6. LED light does not turn ON
 - Please contact maintenance support.
7. QR code does not appear
 - There is a possibility of cloud system failure. Please contact maintenance support.

SAFETY PRECAUTIONS

Warnings

- Do NOT place any object on top of the product or ride on the product.
- Turn OFF the mirror and unplug the power cord from the outlet immediately if there is smoke, strange odor/noise or unusual heat.
If you continue to use, there is a risk of fire, burns and electric shock.
- Unplug the power cord from the outlet immediately if you feel a chattering sensation when touching the product.
If you continue to use, there is a risk of fire, injury and electric shock.
- Turn OFF the mirror and unplug the power cord from the outlet immediately if the product is deformed, cracked or damaged.
If you continue to use, there is a risk of fire, injury and electric shock.
- Do NOT use the product if the power cord or plug is damaged or if you feel the plugging is loose.
If you continue to use, there is a risk of fire, injury and electric shock.
- Do NOT pull the cord when unplugging the power cord from the outlet.
The power cord may be damaged and there is a risk of fire and electric shock.
- Do NOT modify or disassemble the product.
There is a risk of electric shock, fire and rupture.
- Do NOT throw this product into a fire, heat it, or short-circuit the terminals.
There is a risk of heating, ignition and rupture.
- Do NOT block the air vents of the product.
There is a risk of heat to build up inside the product causing smoke or fire.
- Do NOT use the product with dust on it.
There is a risk of heating and ignition

Caution

- Do NOT use a power supply other than 100-240V.
- Do NOT use the product with wet hands.
- Do NOT damage, forcibly bend, pull, twist, place heavy objects on, pinch, process or wrap the cord around the product.
- Please be careful not to pinch your fingers when installing or moving the product.
- Do NOT scratch the glass surface with sharp objects.
- Do NOT use or store the product in the following places.
There is a risk of malfunction.
Dusty places, places subject to shocks and vibrations, unstable places, near heating equipment, near magnetic objects (fans, large speakers), places exposed to direct sunlight for long time, places where there is a possibility of falling, places subject to moisture and humidity, near chemicals and liquids, places subject to heat, places subject to corrosive gases (ozone gas, etc.), places subject to bumping due to heavy traffic, places where infants and pets can reach, near flammable objects, outdoors.
- Do NOT use the product in a place where it will be exposed to water or high humidity.
- Do NOT wash this product or the power adapter in water.
- Do NOT wet this product or the power adapter.